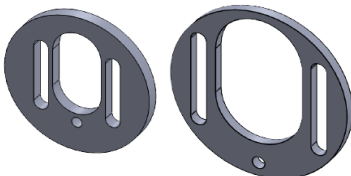
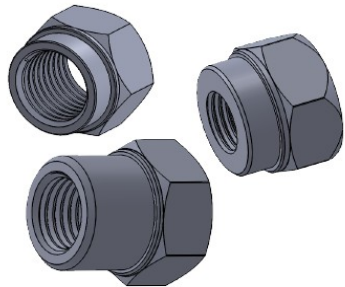


Main Plate	Bearing Plate	Upper Plate	Lower Plate
			
Screw	Washer	Bottom Sleeve	Top Nut
			
Spacer Plate	Spring Bearing	OEM Bearing's Insert	Self Locking Nut
